
QUADRA-FIRE TOP VENT ADAPTER INSTALLATION INSTRUCTIONS

PART: **TPVNT-1** FOR PELLET APPLIANCES: **CLASSIC BAY 1200**

Included in Kit:

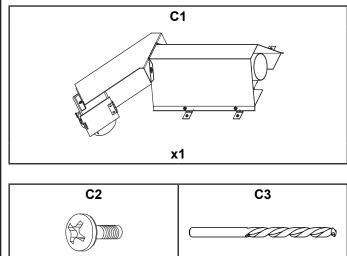

Included in kit:


x6

Quantity one (1) Top Vent Adapter Assembly (C1), quantity six (6) 8-32 x 3/8 inch screws (C2), and quantity one (1) #26 Drill Bit (C3)


x1

Tools Required:

Powered drill, Phillips head screwdriver, and high temp silicone (500°F)

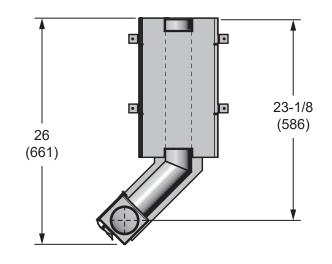

1. Put a 1/4 inch bead of silicone on the outer edge of the appliance exhaust outlet (Figure 1).

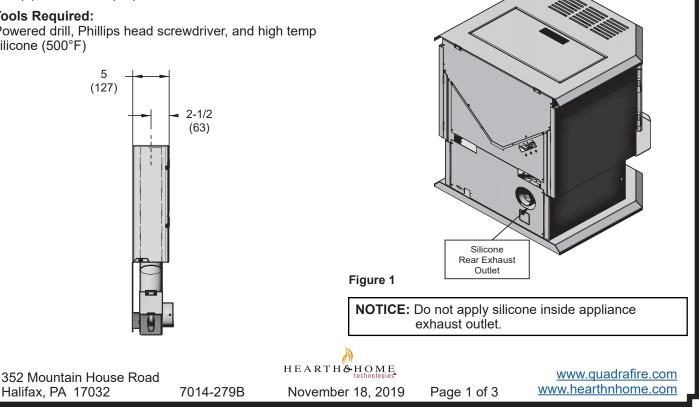

- 2. Slide the Top Vent Adapter Assembly **(C1)** onto the exhaust outlet over bead of silicone making sure the adapter is in the vertical position.
- 3. Slide the outer shield up or down to align evenly with the top of stove.
- 4. Tighten the adjusting screws when the shield is in the proper position (Figure 2).



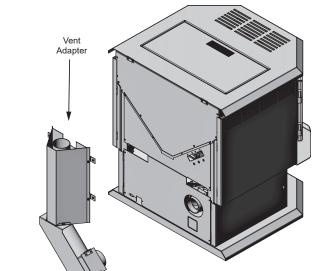


Figure 2

 Ensuring the adapter is in the vertical position; drill four (4) holes with #26 Drill Bit (C3) into the back of the stove using the outer shield on the Top Vent Adapter Assembly (C1) as a guide, secure using four mounting 8-32 x 3/8 inch screws (C2) (Figure 3).

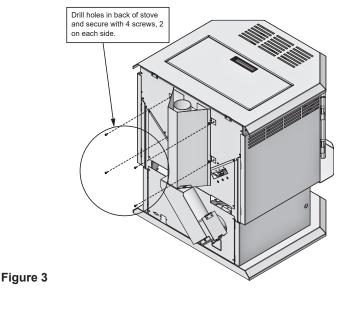

 Drill two (2) holes with #26 Drill Bit (C3) through the exhaust outlet using the two (2) holes already in the short horizontal pipe in the Top Vent Adapter Assembly (C1)as a guide; secure using two (2) mounting 8-32 x 3/8 inch screws (C2) (Figure 4).

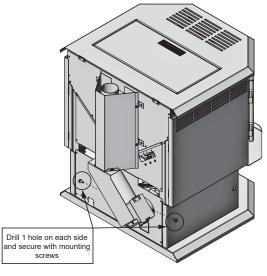

 Put a 1/4 inch bead of silicone on the outer edge of the Top Vent Adapter Assembly (C1) exhaust outlet (Figure 5).

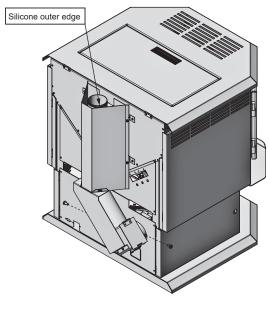


Figure 5

Figure 4

NOTE: Following venting manufacturing instructions, install stove pipe to Top Vent Adapter Assembly **(C1)**. Appliance adapter from venting manufacture may be required. <u>Do not apply</u> silicone inside appliance exhaust outlet.

HEARTHOMENovember 18, 2019 Page 2 of 3

www.quadrafire.com www.hearthnhome.com

