HEARTH&HOME

PH-FRT, PH-SIDE Models: MEZZO-C Series, CRAVE-C Series, ECHELON-C Series Passive Heat Kit Installation Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

CAUTION! Do not install damaged components.

If any parts are missing or damaged, contact your dealer before starting installation. **DO NOT** install a damaged kit.

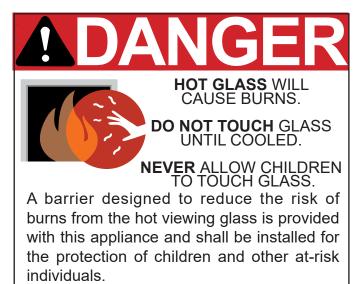


Table of Contents

Introduction
Preparation
Kit Contents
Clearances
Mantel Projections 4
Framing
Good Faith TV Guidelines 5
Framing Dimensions - Passive Heat Front Discharge (PH-FRT) Single-Sided or See-Through
Framing Dimensions - Passive Heat Side Discharge (PH-SIDE) Single-Sided or See-Through7
Framing Dimensions - Passive Heat Open Top Discharge
Single-Sided or See-Through
Installation Instructions
(Front, Side or Open Top Discharge)
Install Register Cover - Side Discharge Only 11
Installation of Passive Heat with Other Optional Heat
Management Systems
Maintenance

Introduction

The Passive Heat (PH-FRT, PH-SIDE) Heat Management System conveys warm air from the fireplace into the same room through either a front discharge slot or two side discharge heat registers. Installation of the Passive Heat kit must be done in conjunction with the appliance installation. Installation of this kit **MUST** be performed by a qualified service technician.

WARNING! Risk of Fire! DO NOT install the Passive Heat (PH-FRT or PH-SIDE) Heat Management System with models that are not approved. Overheating will occur.

The Passive Heat Trim Kit (PHTRIM-XX) is also available for installation with the Front Discharge Passive Heat systems and must be purchased separately. Follow instructions included with the trim kit to complete installation of the Passive Heat system.

The Passive Heat kit is tested and safe when installed in accordance with this installation manual. It is your responsibility to read all instructions before starting installation and to follow these instructions carefully during installation.

The Passive Heat kit is carefully engineered and must be installed only as specified. If you modify it or any of its components you will void the warranty, and you may possibly cause a fire hazard. Installation must be done according to applicable local, state, provincial, and/or national codes.

Preparation

Plan the location of the appliance.

Determine whether front or side discharge is to be installed and follow instructions for the appropriate application.

Power Vent Option

If an optional power vent will be installed in conjunction with the Passive Heat Kit (PH-FRT or PH-SIDE), Hearth & Home Technologies recommends the PVLP-SLP power vent option. If the application does not allow for the PVLP-SLP to be used, the PVI-SLP-B may be used. The PVI-SLP-B must be mounted outside the chase due to the higher noise level created.

CAUTION! Risk of Burns!

- Appliance MUST be turned off and cooled before kit is installed.
- Shut off gas supply.

Kit Contents

Verify and remove contents from packaging before beginning installation. See Figure 1 (Front Discharge) or Figure 2 (Side Discharge).

Contents of Front Discharge Kit PH-FRT							
FRONT D	FRONT DISCHARGE KIT (PH-FRT)						
DESCRIPTION	SERVICE PART NO.	QTY					
Inner Flue, Top	Service part not available	4					
Pull Tool	2600-200	1					
Pull Tool							
Pull Tool Inner Flue, Top							

Figure 1 Front Discharge Passive Heat Kit Components

Contents of Side Discharge Kit PH-SIDE

SIDE DISCHARGE KIT (PH-SIDE)						
DESCRIPTION	SERVICE PART NO.	QTY				
Register Cover	2560-120	2				
Inner Flue, Top	Service part not available	4				
Pull Tool	2600-200	1				

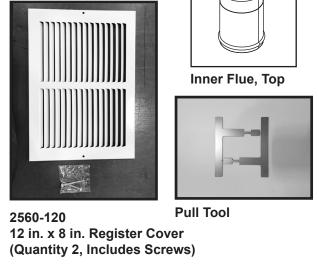


Figure 2 Side Discharge Passive Heat Kit Components

Clearances

WARNING! Risk of Fire! Maintain clearances to combustibles as specified.

Ensure all clearances are maintained.

- Maintain minimum distance from top of appliance opening to the room ceiling. Refer to the figures in the Framing section of this instruction.
- A chase ceiling is required at the top of the passive heat discharge opening for all installations. An open space, or "cavity," is not allowed above the passive heat discharge opening. Construct the false ceiling from material such as metal, drywall or plywood.

NOTICE: (See Through models ONLY) If Passive Heat-Front Discharge or Open Top Chase is the selected heat management option, consider these recommendations:

- · Locate the Passive Heat discharge opening in the larger of the two rooms served by the See-Through model installed for optimal comfort.
- Locate the control side of the appliance and the Passive Heat discharge opening in the same room.


Clearance - Sprinkler to Passive Heat

Figure 3 references the clearances that must be adhered to when installing a sprinkler head near a passive heat discharge opening.

- * If the distance from the top of the passive heat front discharge opening to the ceiling is 36 inches or greater, then there is no 36 inch clearance requirement. This is for a ceiling sprinkler head installation only.
- **Note:** When installing a sprinkler head near a heat discharge opening, it is recommended to use a sprinkler head with an Extra High sprinkler activation temperature rating.
- When installing a sprinkler head exterior of the chase, maintain the following clearances to discharge openings

(convection slots, passive heat registers, heat zone registers, etc.): 36 inches top, 18 inches sides and 6 inches bottom.

 DO NOT install a sprinkler head inside a chase that is set up for passive heat.

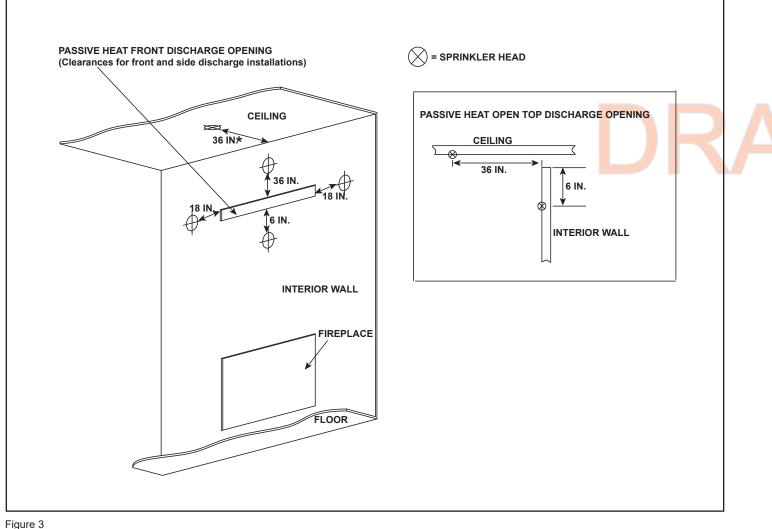

Mantel Projections

Refer to the appliance Installation Manual.

Framing

- 1. Dimensions for framing using front discharge are shown in Figure 5 using either the trim kit or using the clean face finishing method.
- Figure 6 shows the framing requirements for the PH-SIDE kit using a side discharge. Do not place combustible objects or combustible materials on the finished wall adjacent to the non-combustible zone (E) on either side of the appliance.
- 3. Dimensions for framing using the Open Top Discharge method of installation are shown in Figure 7 using the clean face finishing method.


WARNING! Risk of Fire! Wire mesh required on discharge opening bottom at top of framing when discharge opening is greater than 3 inches.

4. If discharge opening (Dimension A in Figure 7) is three inches or greater, a piece of wire mesh with 1/2 inch x 1/2 inch opening is required to be installed on the top of the framing above the appliance.

The wire mesh will prevent objects from falling through the opening and onto the top of the appliance. The wire mesh may be available at a hardware or home improvement retailer.


The wire mesh must be fastened to the top of the framing on the bottom side of the discharge opening.


NOTICE: The location of the Passive Heat discharge opening could allow for venting and other construction materials to be visible. It is acceptable to paint the vent pipe and other construction materials using a high temperature paint with a minimum of 300 °F continuous exposure rating. Hearth & Home Technologies recommends using black touch up paint (part number TUP-GBK-12) available from your Hearth & Home Technologies dealer.

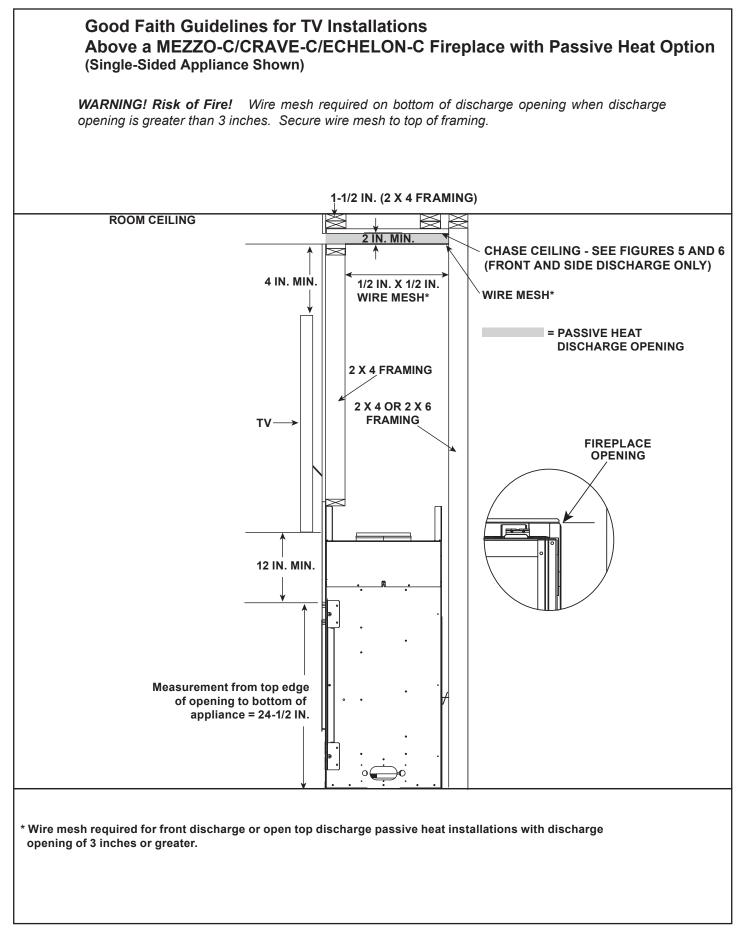

Framing Dimensions - Passive Heat Front Discharge (PH-FRT) Single-Sided or See-Through

Front Discharge: Air conveyed into the room through one front discharge slot.

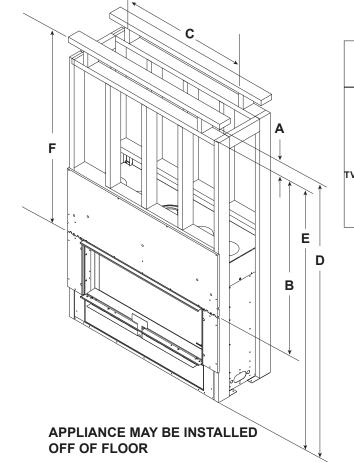

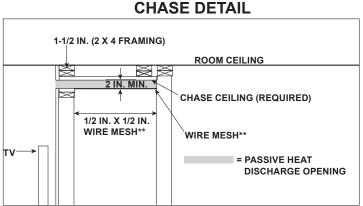


WARNING! Risk of Fire! Wire mesh required on bottom of discharge opening when discharge opening is greater than 3 inches. Secure mesh to top of framing.


FRONT DISCHARGE FRAMING DIMENSIONS								
			A					
		TRIM KIT* (PH-TRIM)	NO TRIM KIT**	В	С	D	E	F
		Height of Discharge Opening	Minimum Height of Discharge Opening	Minimum Clearance to Framing	Width of Discharge Opening	Clearance to Top of Discharge Opening from Bottom of Appliance	Clearance from Bottom of Appliance to Bottom of Discharge Opening	Minimum Clearance Discharge Opening to Ceiling
MEZZO36-C/ST-C CRAVE4836-C/ST-C	Inches	3-1/2	2	48	36-1/2	74-1/2	72-1/2	51-1/2
ECHEL36IN-C/STIN-C	millimeters	89	51	1219	927	1892	1842	1308
MEZZO48-C/ST-C CRAVE6048-C/ST-C ECHEL48IN-C/STIN-C	Inches	3-1/2	2	48	48-1/2	74-1/2	72-1/2	51-1/2
	millimeters	89	51	1219	1232	1892	1842	1308
MEZZO60-C/ST-C CRAVE7260-C/ST-C ECHEL60IN-C	Inches	3-1/2	2	48	60-1/2	74-1/2	72-1/2	51-1/2
	millimeters	89	51	1219	1537	1892	1842	1308
MEZZO72-C/ST-C CRAVE8472-C/ST-C ECHEL72IN-C	Inches	3-1/2	2	67-1/2	72-1/2	94	92	71
	millimeters	89	51	1715	1842	2388	2337	1803

* Measurement for Trim Kit = 3-1/2 in. + additional finishing material thickness

** Measurement for without trim kit = 2 in. + additional finishing material thickness. If discharge opening is greater than 3 inches wire mesh is required. See details in the Framing Section.

Figure 5 Passive Heat Front Discharge Framing Dimensions with Clean Face Finish or Trim Kit

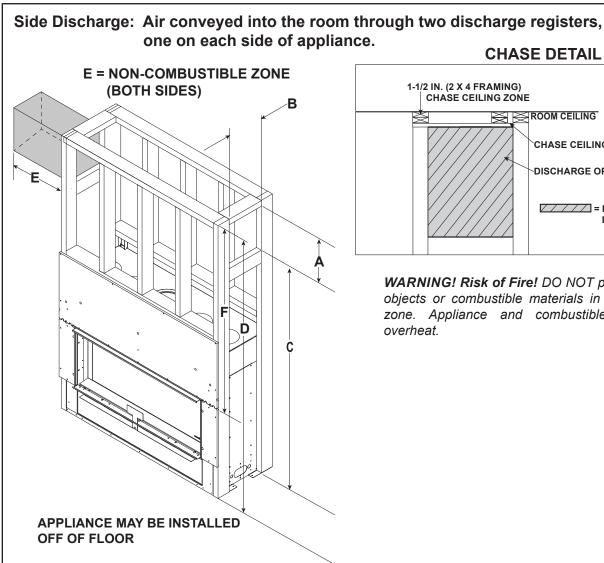

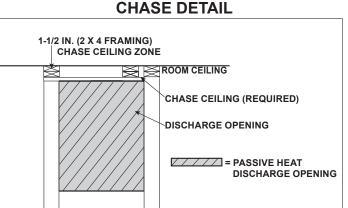


WARNING! Risk of Fire! DO NOT place combustible objects or combustible materials in non-combustible zone. Appliance and combustible materials will overheat.

SIDE DISCHARGE FRAMING DIMENSIONS									
		Α	В	С	D	E	F		
		Height of Discharge Opening	Width of Discharge Opening	Minimum Clearance to Discharge Opening from Bottom of Appliance	Minimum Clearance Bottom of Appliance to Ceiling	Minimum Clearance to Combustible Materials	Minimum Clearance Discharge Opening to Ceiling		
MEZZO36-C/ST-C	Inches	12-1/4	8-3/4	62-3/4	76-1/2	18	52		
CRAVE4836-C/ST-C ECHEL36IN-C/STIN-C	millimeters	311	222	1594	1943	457	1321		
CRAVE6048-C/ST-C	Inches	12-1/4	8-3/4	62-3/4	76-1/2	18	52		
	millimeters	311	222	1594	1943	457	1321		
MEZZO60-C/ST-C CRAVE7260-C/ST-C ECHEL60IN-C	Inches	12-1/4	8-3/4	62-3/4	76-1/2	18	52		
	millimeters	311	222	1594	1943	457	1321		
MEZZO72-C/ST-C CRAVE8472-C/ST-C ECHEL72IN-C	Inches	12-1/4	8-3/4	81-1/4	95	18	70-1/2		
	millimeters	311	222	2064	2413	457	1791		

Figure 6 Passive Heat Side Discharge Framing Dimensions

Framing Dimensions - Passive Heat Open Top Discharge Single-Sided or See-Through

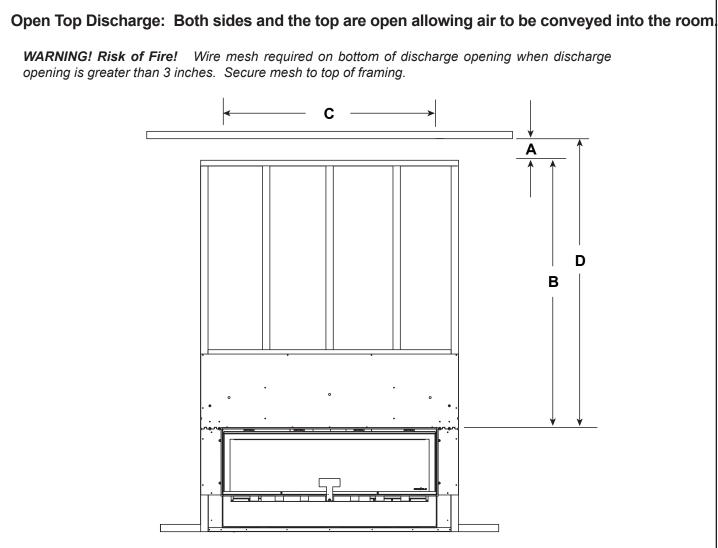

OPEN TOP DISCHARGE MINIMUM FRAMING DIMENSIONS								
		A*	В	С	D			
		Minimum Height of Discharge Opening	Clearance to Framing	Width of Discharge Opening	Minimum Clearance Discharge Opening to Ceiling			
MEZZO36-C/ST-C CRAVE4836-C/ST-C ECHEL36IN-C/STIN-C	Inches	2	48	36-1/2	50			
	millimeters	51	1219	927	1270			
MEZZO48-C/ST-C CRAVE6048-C/ST-C ECHEL48IN-C/STIN-C	Inches	2	48	48-1/2	50			
	millimeters	51	1219	1232	1270			
MEZZO60-C/ST-C CRAVE7260-C/ST-C ECHEL60IN-C	Inches	2	48	60-1/2	50			
	millimeters	51	1219	1537	1270			
MEZZO72-C/ST-C CRAVE8472-C/ST-C ECHEL72IN-C	Inches	2	67-1/2	72-1/2	69-1/2			
	millimeters	51	1715	1842	1765			

* Wire mesh required for front discharge or open top discharge passive heat installations with discharge opening of 3 inches or greater.

Figure 7 Passive Heat Minimum Framing Dimensions Open Top Discharge

Installation Instructions

(Front, Side or Open Top Discharge)

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

1. Remove the four knockouts on the top of the appliance by dislodging them with a hammer and then using a screwdriver to remove from the holes. See Figure 8.

WARNING! Risk of Fire! All four knockouts MUST be removed. Appliance and combustible materials will overheat.

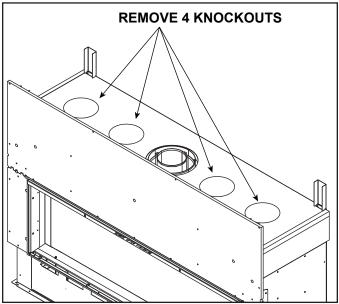


Figure 8 Remove Knockouts

2. Remove the insulation plug from each knockout. Discard. See Figure 9.

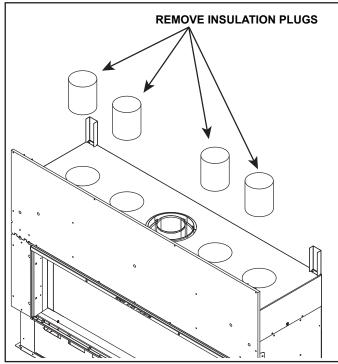


Figure 9 Remove Insulation Plugs

3. Set a collar in each of the holes where the knockouts were removed. See Figure 10.

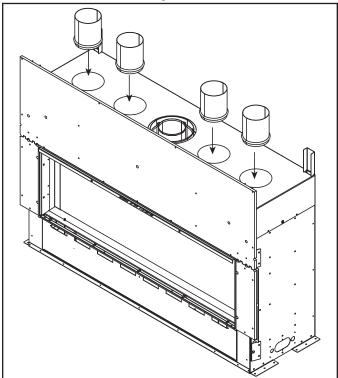


Figure 10 Install Collars

4. Remove the screws from the heat shield as shown in Figure 14. Quantity and location of screws will vary between models.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves. Sheet metal edges are sharp.

5. Bend pull tools and break apart as shown in Figure 11 and Figure 12.

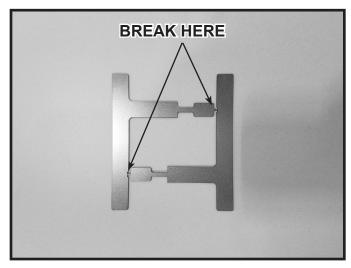


Figure 11 Bend and Break Pull Tools Apart

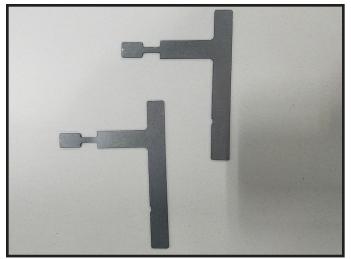


Figure 12 Pull Tools Separated

- 6. Insert pull tool into slots on left and right sides of appliance. See Figure 13.
- 7. Carefully pull the heat shield out of the appliance as shown in Figure 14 and Figure 15. Discard heat shield. Repeat procedure on other side if application is on a see-through appliance.

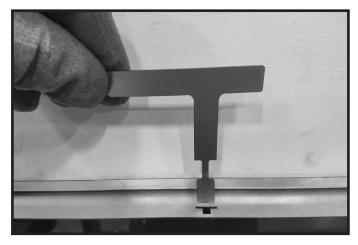


Figure 13 Pull Tool Inserted Into Slot

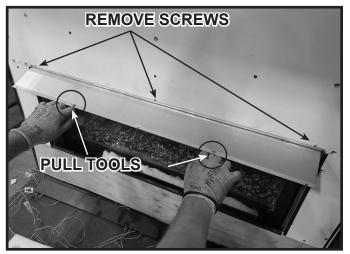


Figure 14 Use Pull Tools to Remove Heat Shield

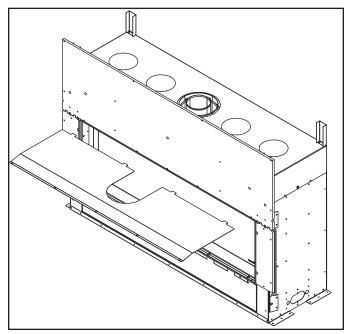


Figure 15 Remove Heat Shield

WARNING! Risk of Fire! Remove all debris and objects from firebox top and appliance top before operating the appliance.

8. Inspect for and remove all debris that may have accumulated or objects that may have been placed on the firebox top and appliance top during the installation process. All debris and objects must be removed prior to operation of the appliance. Firebox top and appliance top are shown in Figure 16.

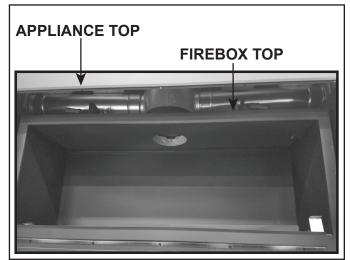


Figure 16

9. Side Discharge Only: Instructions continue on the following page.

Install Register Cover - Side Discharge Only

WARNING! Risk of Overheating! Both passive heat side discharge assemblies included with kit **MUST** be installed and operational. Overheating will occur.

 Install register cover with louvers facing the front of the fireplace (control side) using provided screws See Figure 17.

WARNING! Risk of Fire! DO NOT block passive heat registers! Overheating will occur.



Figure 17 Correct Register Orientation

Painting

If desired finishing includes a painted register cover, Hearth & Home Technologies recommends using high temperature paint with a minimum of 300 °F continuous exposure rating.

Installation of Passive Heat with Other Optional Heat Management Systems

There are other heat management options available for use with the MEZZO-C, CRAVE-C and ECHELON-C models. Consult the appliance manual for compatible options. Only one Passive Heat knockout may be used for additional heat management systems.

WARNING! Risk of Fire! DO NOT cover a knockout unless a heat management system will be installed in its place. Only one Passive Heat knockout may be used for an additional heat management system. Appliance and combustible materials will overheat.

Note: The optional Heat-Zone[®] Gas and Heat-Out-Gas kits contain two collars. One collar will remain unused when installing either kit in addition to the Passive Heat kit.

Passive Heat Kit Installed with Optional Heat-Zone® Gas

- Only one Heat-Zone[®] Gas kit may be installed and used in conjunction with the Passive Heat kit.
- The HZLIN-ADP adapter kit is required and MUST be ordered separately.
- Refer to the instructions included with the Heat-Zone[®] Gas kit for more information.

Passive Heat Kit Installed with Optional Heat-Out-Gas

 One Heat-Out-Gas kit may be installed and used in conjunction with the Passive Heat kit. Refer to the instructions included with the HEAT-OUT-GAS kit for more information.

Maintenance

Service and maintain the gas fireplace per instructions. Keep the air register(s) clean and free of any blockage.

Please contact your Hearth & Home Technologies dealer with any questions or concerns. For the location of your nearest Hearth & Home Technologies dealer, please visit www.hearthnhome.com.

Hearth & Home Technologies 7571 215th Street West, Lakeville, MN 55044 www.hearthnhome.com